

**PART NUMBER**

58030-61

ORIG. 6-61

**INSTRUCTIONS**

HARLEY-DAVIDSON MOTOR CO., MILWAUKEE 1, WISCONSIN U. S. A.

Your Best Buy   
**GENUINE... HARLEY-DAVIDSON**  
**PARTS and ACCESSORIES**

## WINDSHIELD - SPORTSTER, K &amp; KH MODELS

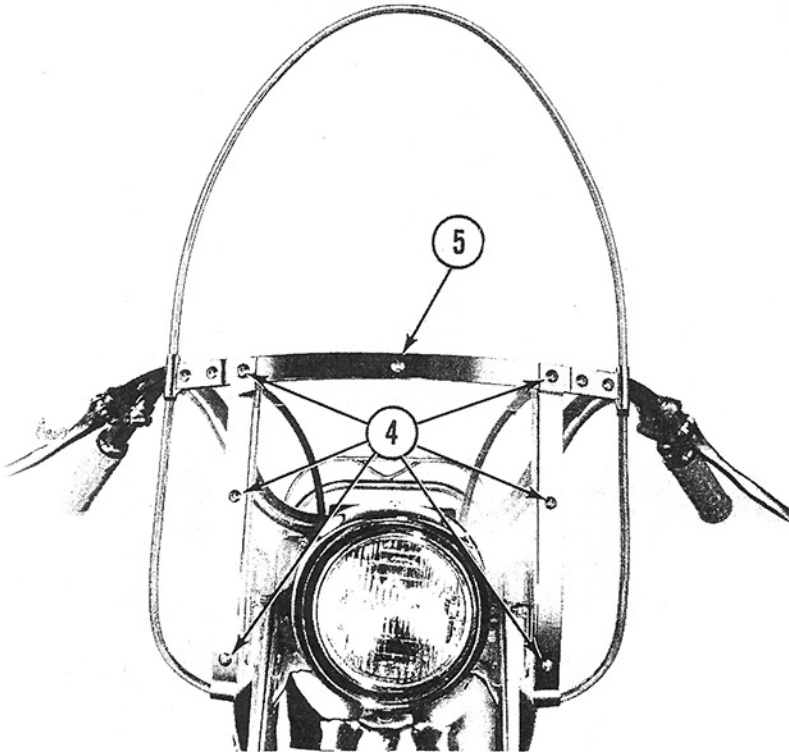


FIGURE 1

Remove headlamp housing screws from one side.

Attach windshield bracket (1) (See Figure 2). Use 1/2" long bolts, lockwashers and small washers (2).

Attach other side the same way.

Mount windshield to brackets, as shown in Figure 2, with remaining nuts, bolts and washers (3). Large flat washers go under bolt heads on outside of slotted brackets.

To install windshield window, loosen 3 Phillips screws in each vertical windshield brace (4) and remove center Phillips screw (5) in cross brace.

Adjust windshield to desired height by means of moving up or down in bracket slots.

**NOTE:** Window is scored at top. Excess above cross brace may be cut off if desired along one of score lines. To cut off, remove and cut with tin shears. Reinstall window.

Drill window through the center hole in brace and reinstall Phillips screw, nut and lockwasher (5). Tighten all Phillips screws.

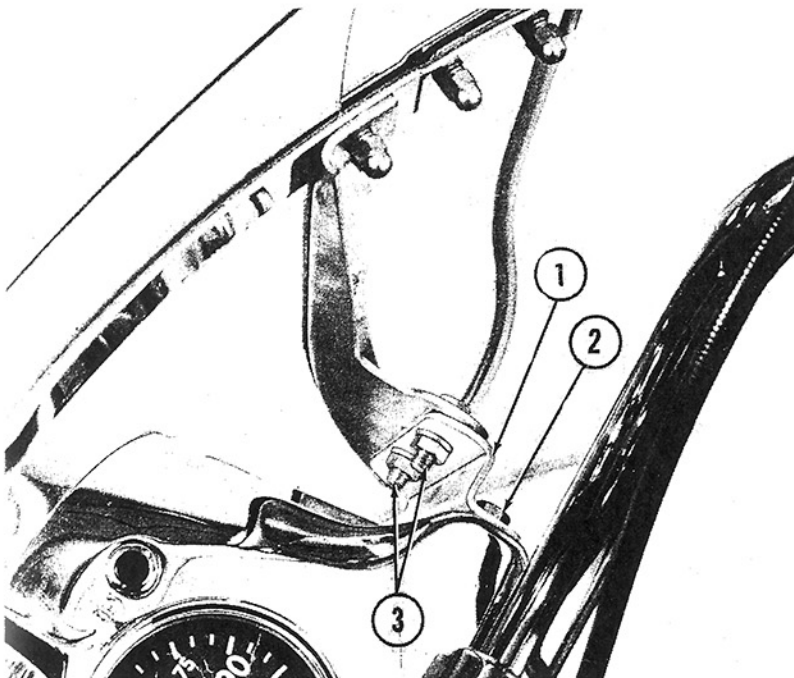


FIGURE 2

Harley-Davidson, Inc. has given us permission to provide this document on our website for the sole purpose of helping us restore our motorcycles.

Harley-Davidson, Inc. retains copyright over these materials, and NO reproduction or other use of these materials is permitted without prior authorization from Harley-Davidson, Inc.

The **Old Sportster and K-model Research Group (OSKRG)** is a group of individuals who have spent years researching the minute differences in the parts, fit, finish, and configuration of the Harley-Davidson 1952-1956 K-Models, and (early) 1957-1969 Sportster models.

The results of our research is published on our website  
**[www.harleyKmodel.com](http://www.harleyKmodel.com)**